

# Installation Manual



FOR STANDARD  
INSTALLATION PROTOCOL  
USE BY INDUSTRY  
PROFESSIONALS



Quality Without Compromise

## 7/8" Corrugated Panel

2-11/16"




32"

7/8"

# Installation Instructions & Information

## Overlap Instructions

The 7/8" Corrugated Panel may be installed vertically or horizontally on sidewall applications and vertically on sloped roof applications. The installer must pay special attention to sheet overlaps and be certain to do so as they are displayed in the below diagram.

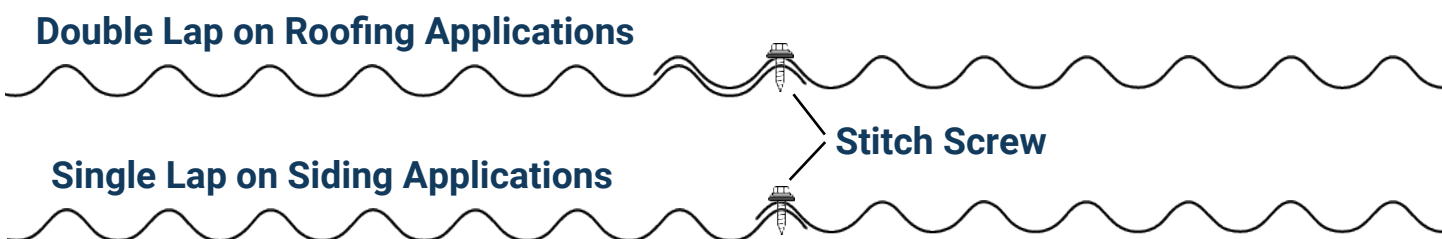

With vertical roof and wall applications, start installing at the end of the building opposite the direction of the prevailing wind. With horizontal wall applications, start installing the metal at ground level and work up. On walls, the girt spacing to which the metal is being applied should be no more than 36" o/c. On roofs, the purlin spacing should be no more than 24" o/c. Always refer to your structural engineer. The minimum slope to which the 7/8" Corrugated Panel should be applied without using sealing tape is 3/12 (and a minimum of 2.5/12 with sealing tape).

The 7/8" Corrugated panels should be no longer than 25' to minimize the effect of metal expansion and contraction. This length is also easier to handle during installation. In situations where longer lengths are required, the ends will be overlapped. On roofs, the distance of end overlap varies with the amount of slope. When the slope is from 2.5/12 an end overlap of 12" is required, a 2.5-4/12 slope requires a 9" overlap, and a 4/12 slope requires a 6" overlap.

To further moisture proof the building, a recommended sealing tape or caulking may be installed on all overlapping edges. Side edge overlaps should be caulked at the top of the rib, while end overlaps should be caulked at the ends of both the top and bottom sheet.

## Application and Preparation

Fasteners should be installed into a solid backing or purlins. Avoid installing directly over green, damp or chemically treated lumber, porous insulation or other damaging materials. The use of a moisture barrier (such as Ice & Water Shield) is recommended in such situations. Corrosive chemicals, fertilizers, manure, some soils, and lime may cause premature deterioration and will need to be cross referenced with material and paint warranties as to ensure warrantability. When in doubt, reach out to one of our professionals for further assistance.

# Installation Instructions & Information

## Fasteners

Screw fasteners of 2" length are placed through every four ribs and fully penetrate the decking. To estimate the quantity of screw fasteners required, estimate 1 screw per square foot of cladding. Screws should be installed to firmly hold the cladding, but must not be overdriven as this will cause the washers to squeeze out or dent the cladding. Panels should always be fastened to a rigid backing, not onto a backing of old shingles or insulation for example.


### Proper Roof Screw Placement



### Proper Wall Screw Placement




### Proper Fastener Installation

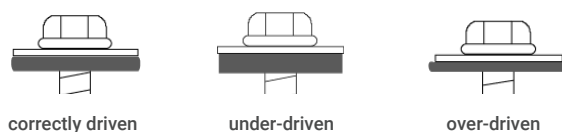

## Panel Storage

If the panels are not going to be used immediately, they should be stored in a dry well ventilated area. If it is not possible to store the material inside, block up the panels to allow air movement around the bundles. It is important to also raise one side of the bundles to ensure positive draining, and to use a good quality cover (other than plastic) anchored loosely to protect the material and still allow ventilation. Store away from corrosive substances, electricity and any other materials that could contaminate or damage the surface of the panels.

# Trim Detail Locator

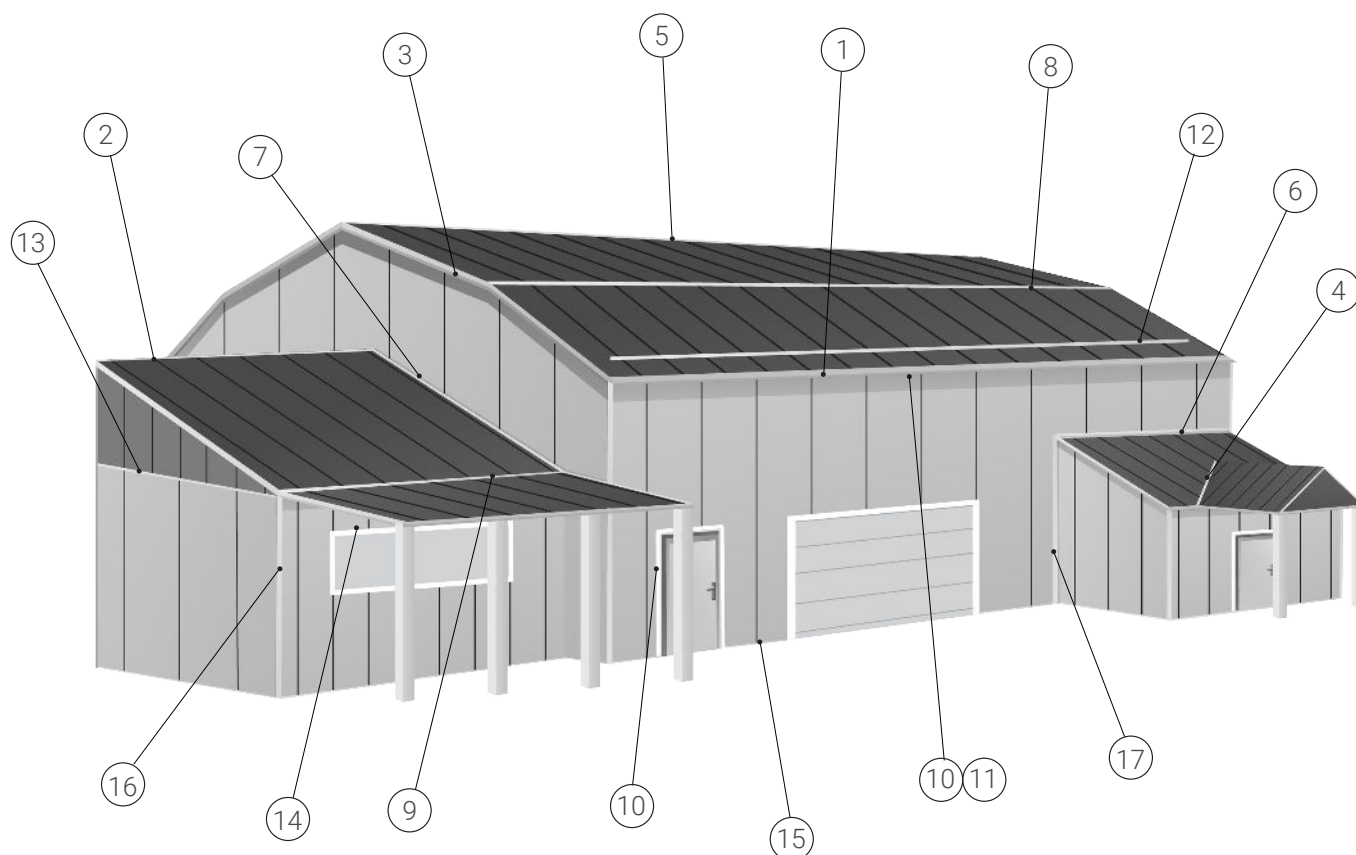

## Details & Illustrations

## Page

## Details & Illustrations


## Page

① Eave.....	5
② Top Gable.....	6
③ Gable.....	7
④ Valley.....	8
⑤ Vented/Non-Vented Ridge Cap.....	9
⑥ Endwall.....	10
⑦ Sidewall.....	11
⑧ High Wall Flashing.....	12
⑨ Transition.....	13


⑩ J-Channel.....	14
⑪ F&J Trim.....	14
⑫ Snow Stop.....	15
⑬ Z-Bar.....	15
⑭ Window Drip.....	16
⑮ Rat Guard.....	16
⑯ Outside Corner.....	17
⑰ Inside Corner.....	18




# Eave Trim Detail

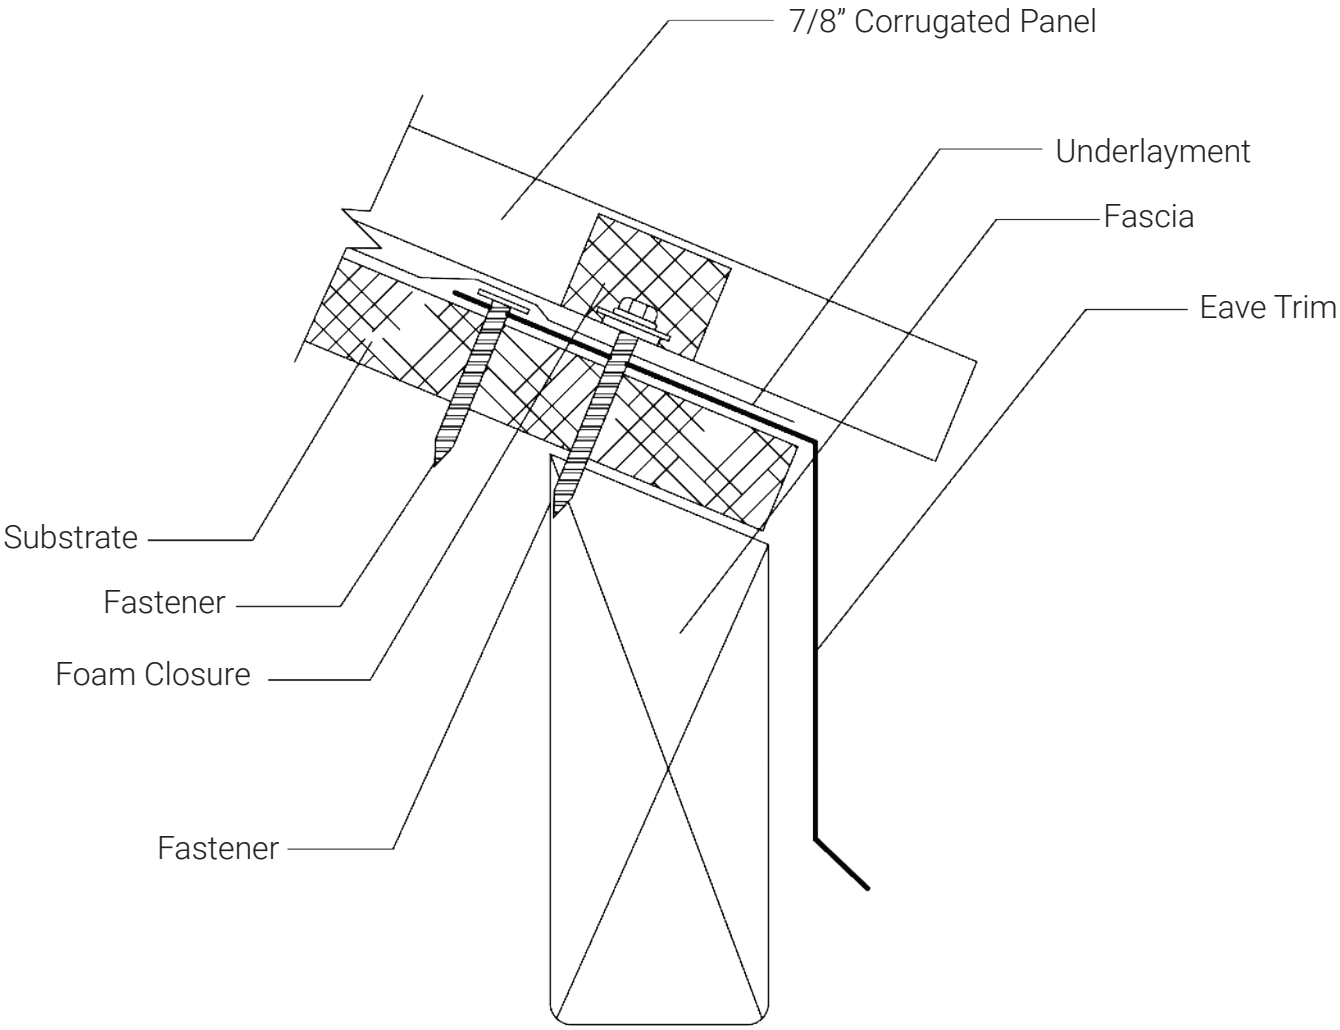


# Top Gable Trim Detail

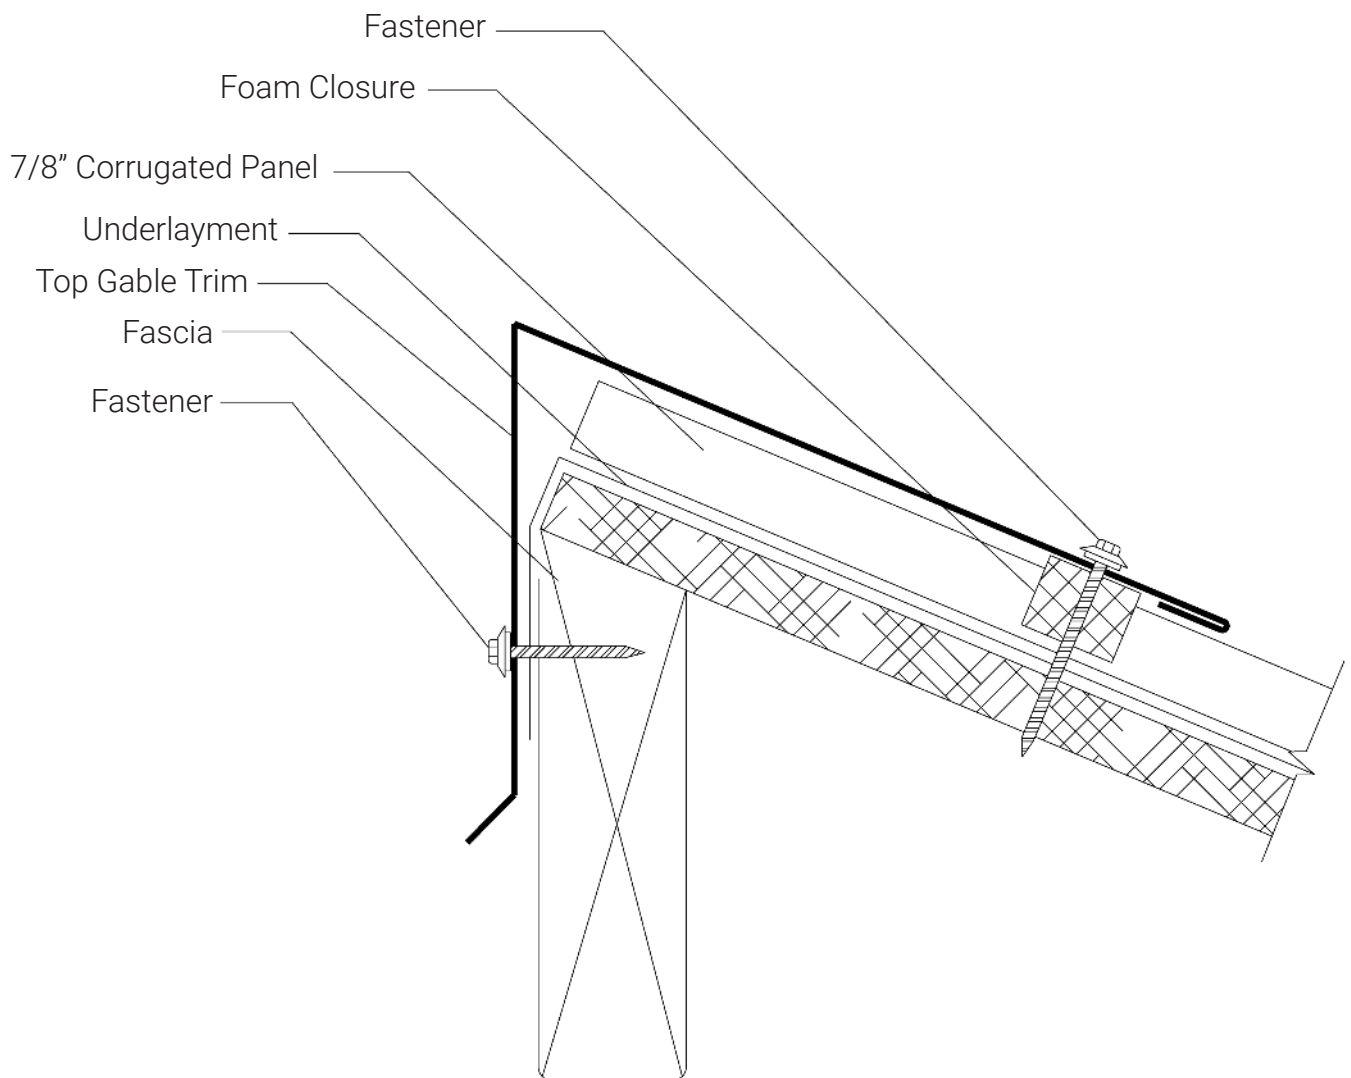

# Gable Trim Detail

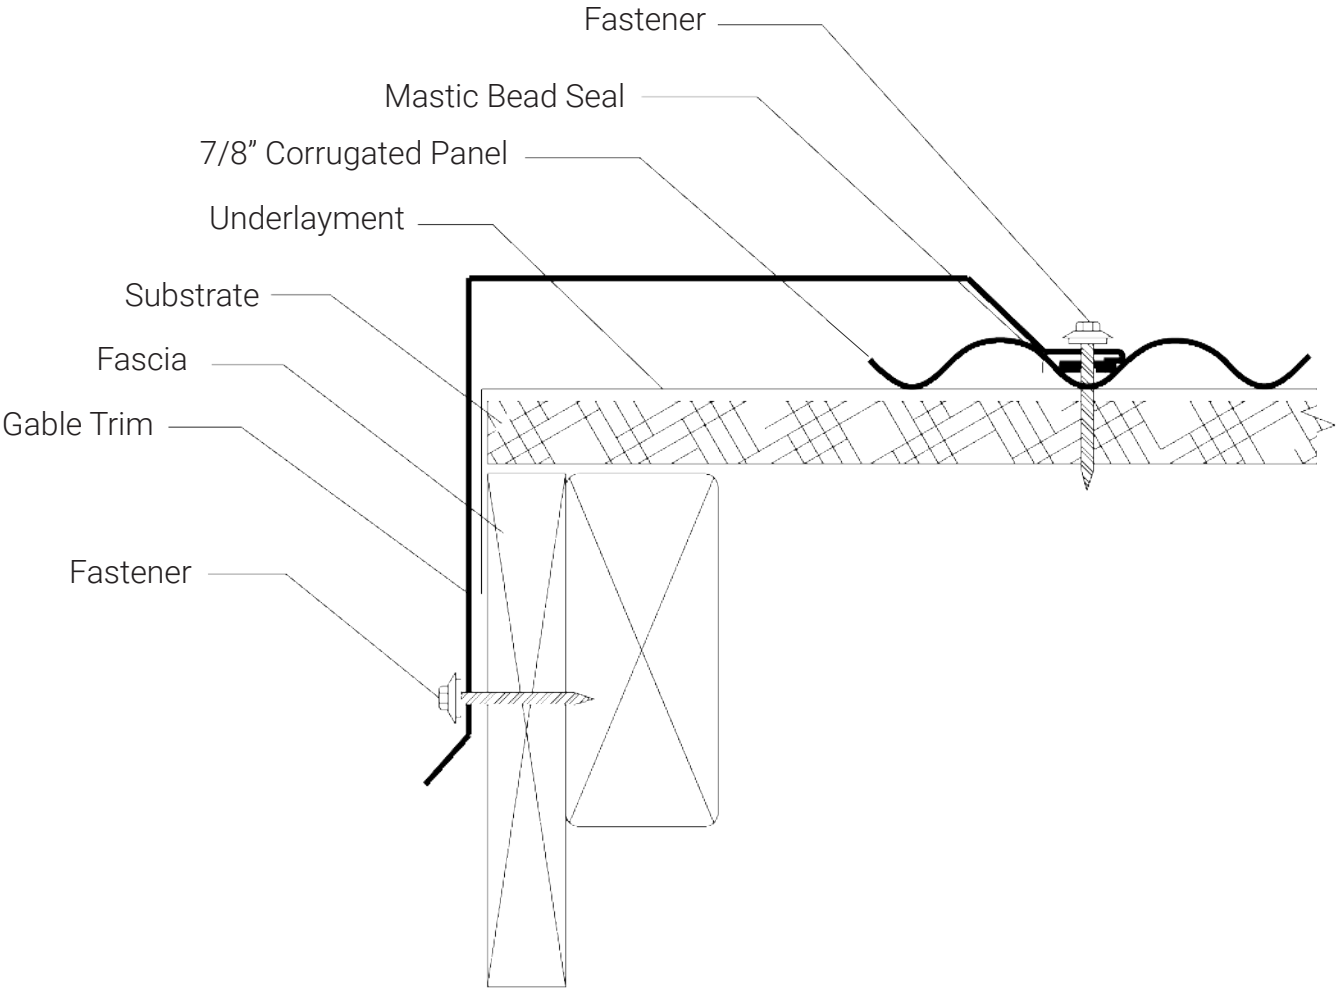


# Valley Trim Detail

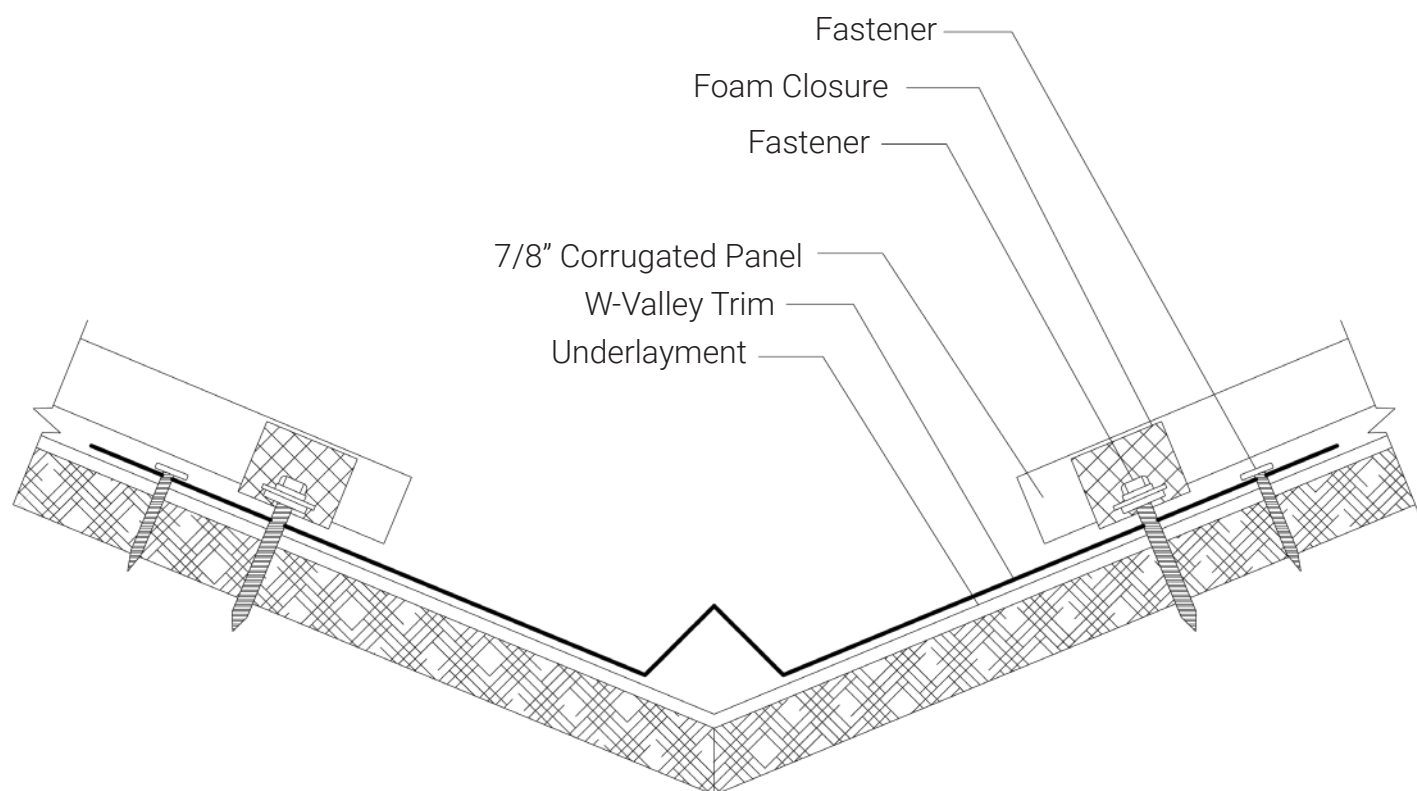





# Vented | Non-Vented Ridge Cap Trim Detail

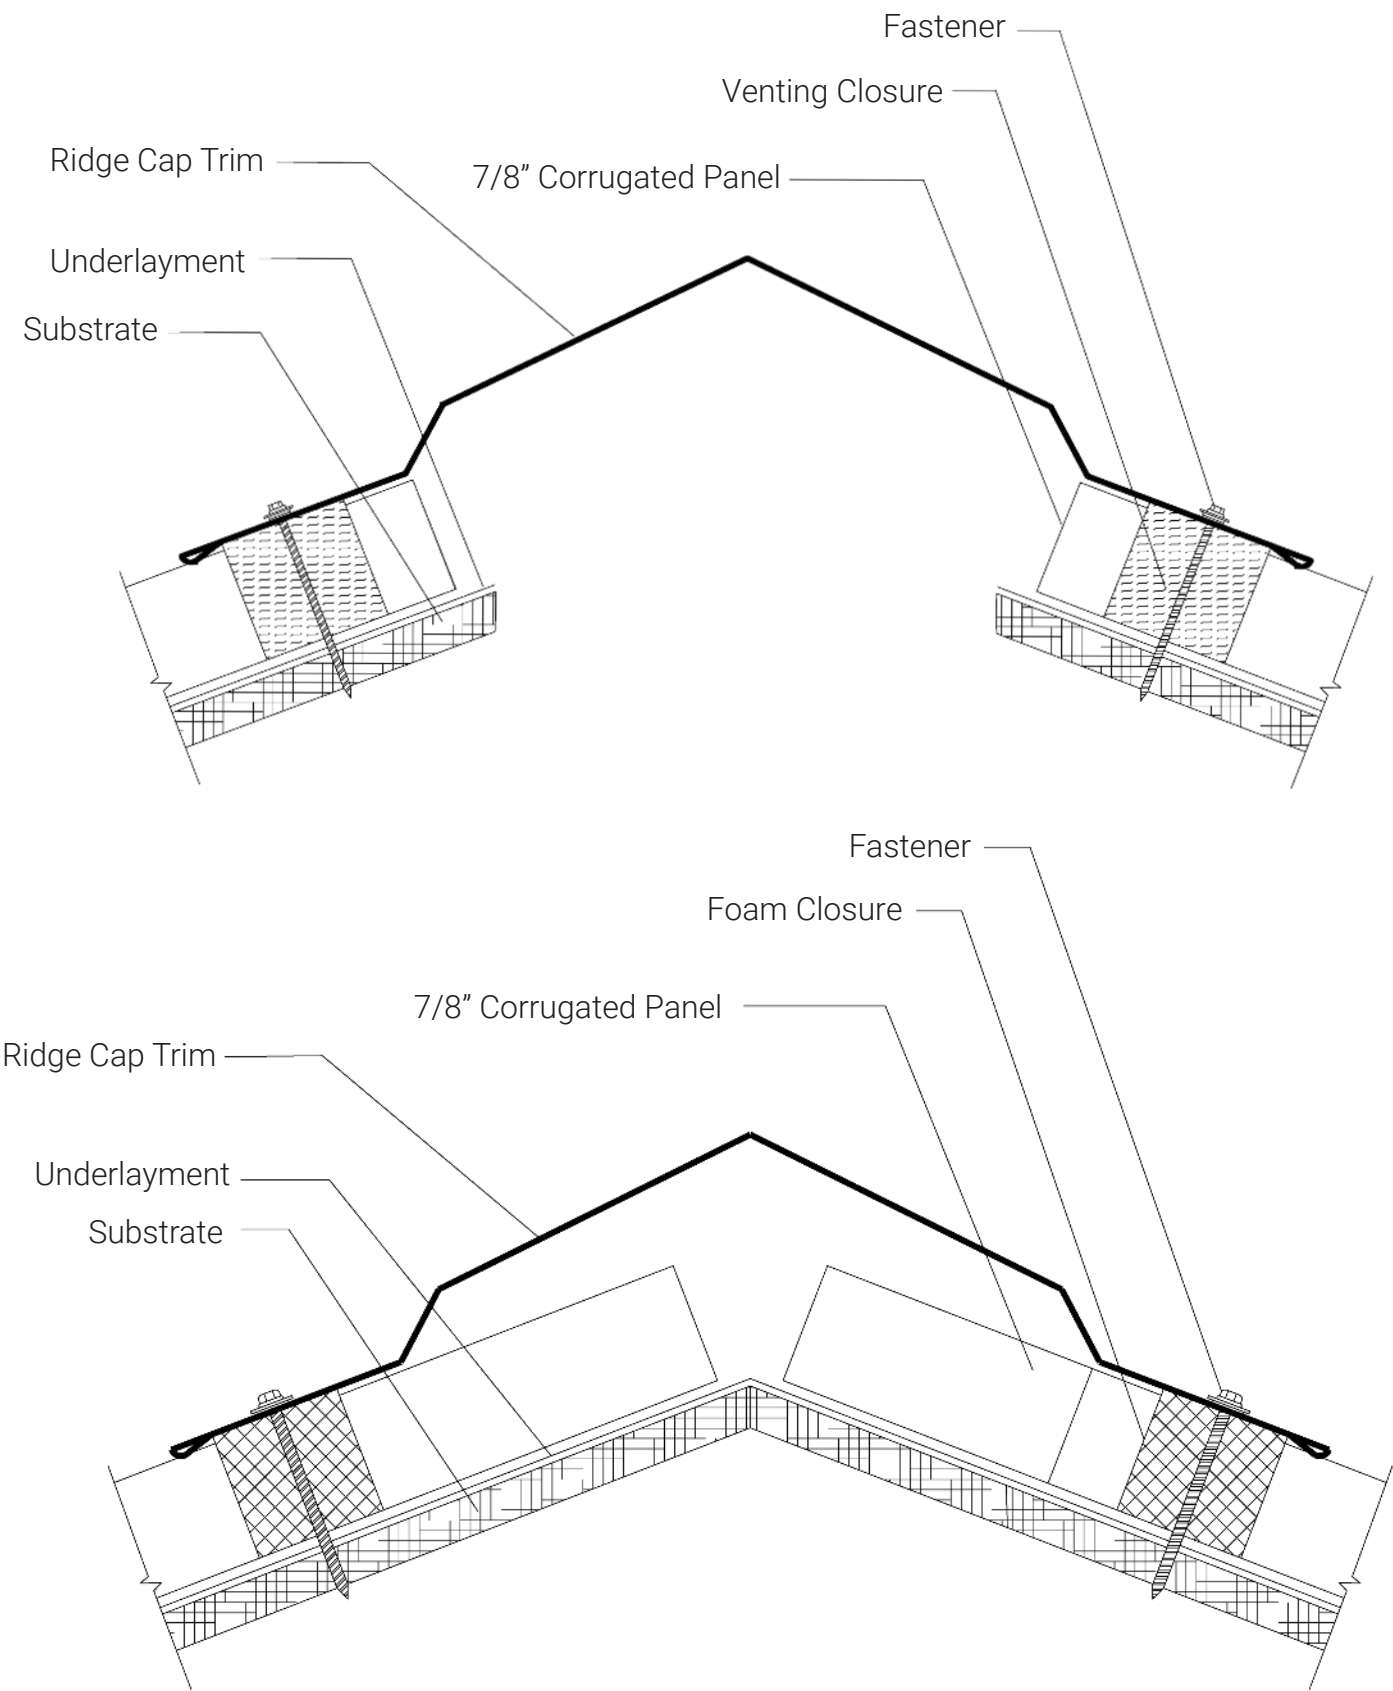


# Endwall Trim Detail

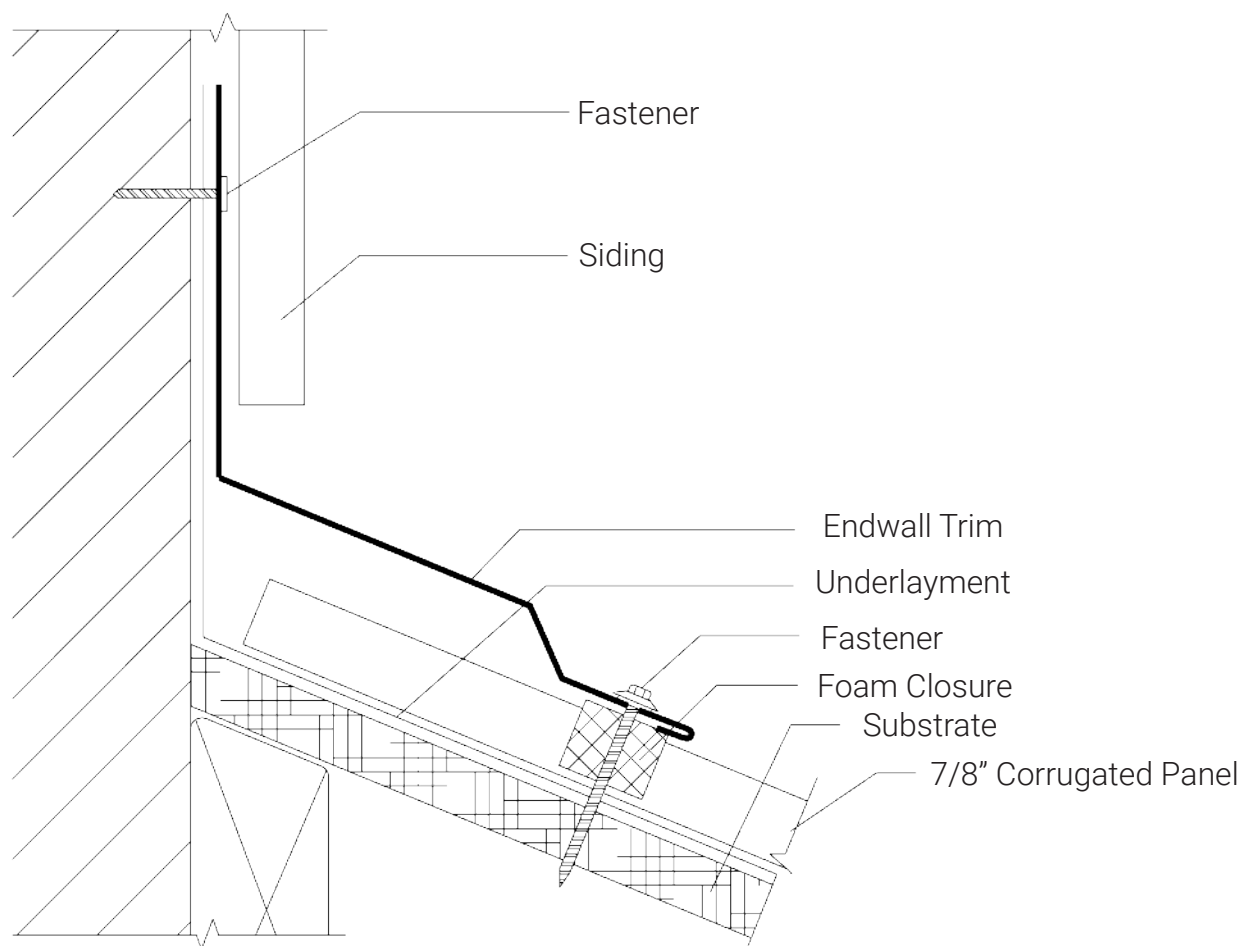


# Sidewall Trim Detail

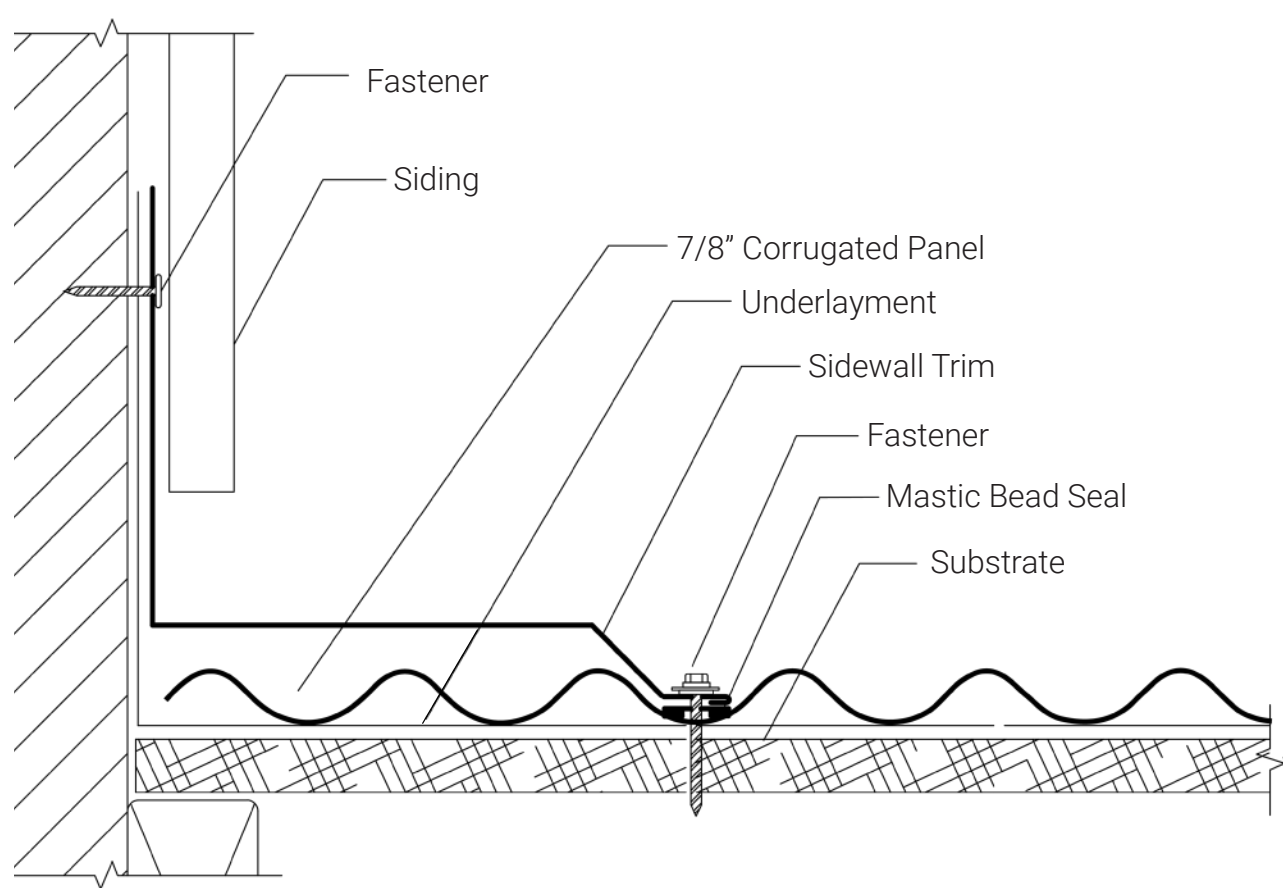



# High Wall Flashing Trim Detail

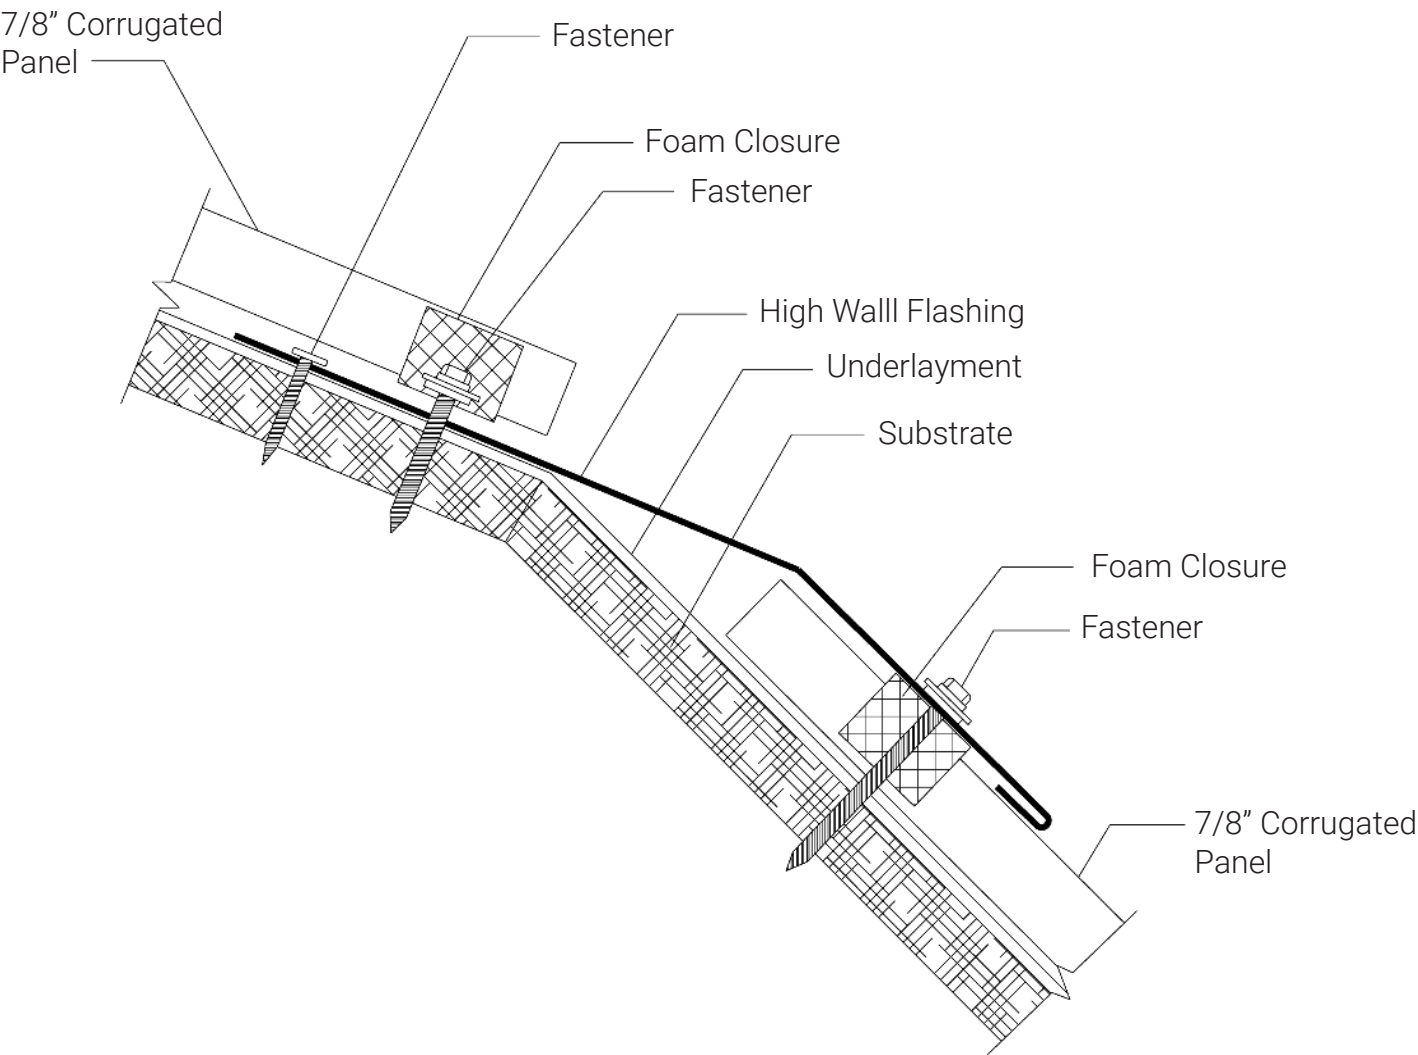

# Transition Trim Detail


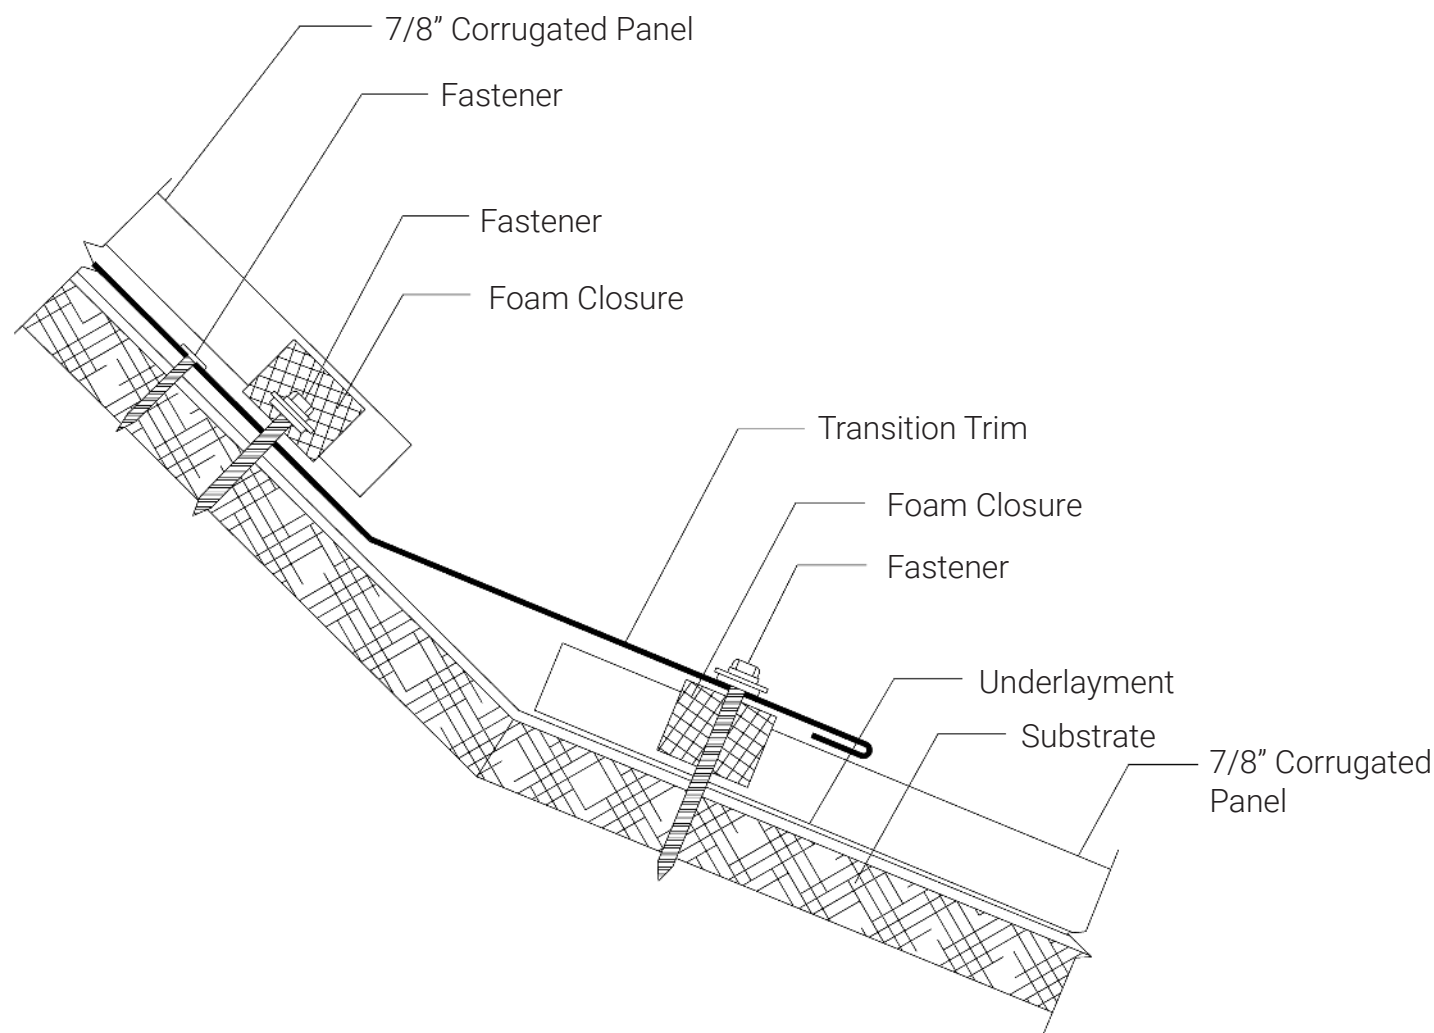


# F&J Trim | 1/2" J-Channel Details

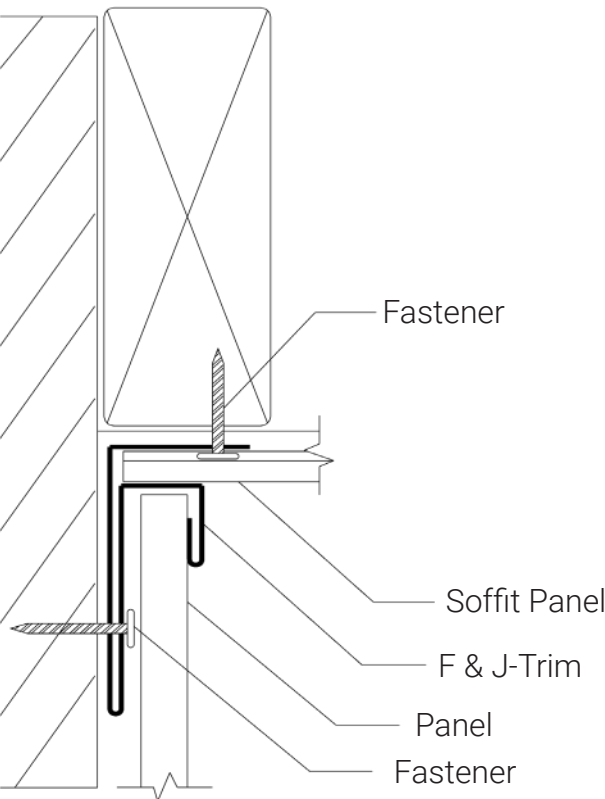
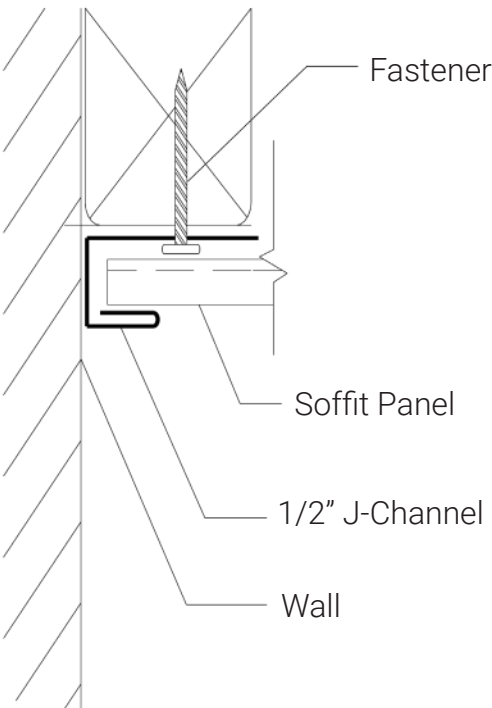





# Snow Stop | Z-Bar Trim Detail

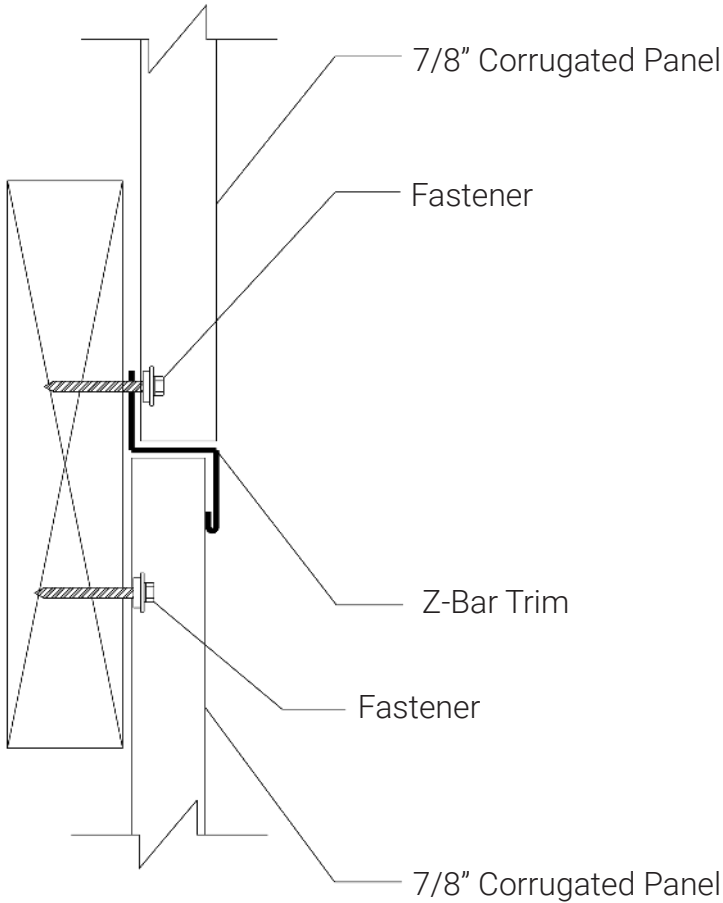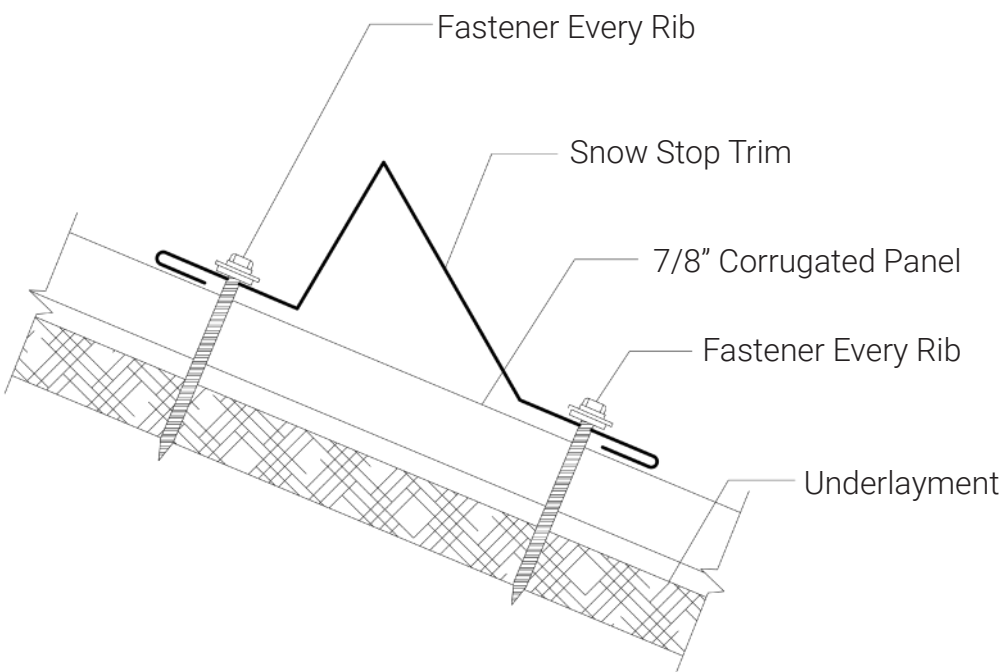


# Window Drip | Rat Guard Trim Detail

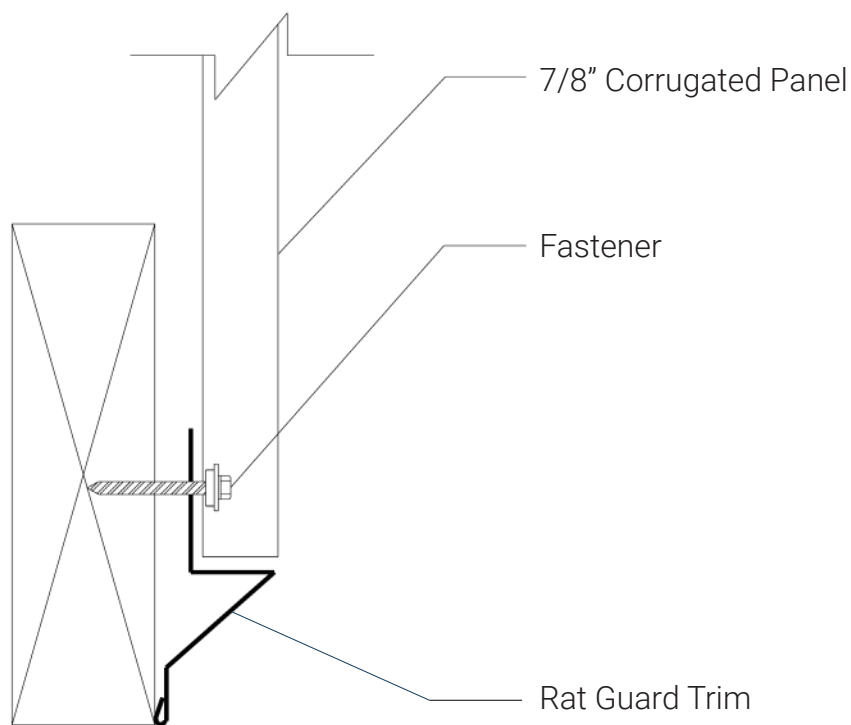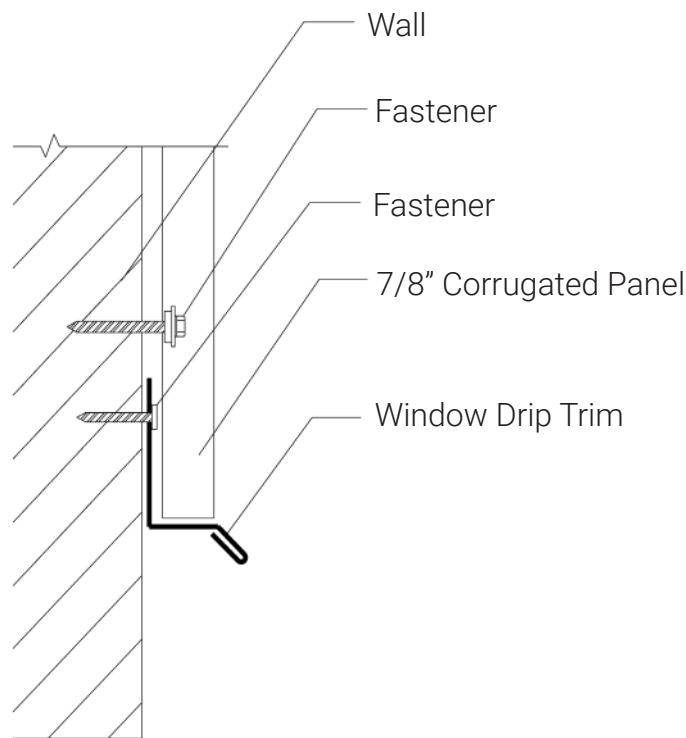

# Outside Corner Trim Detail

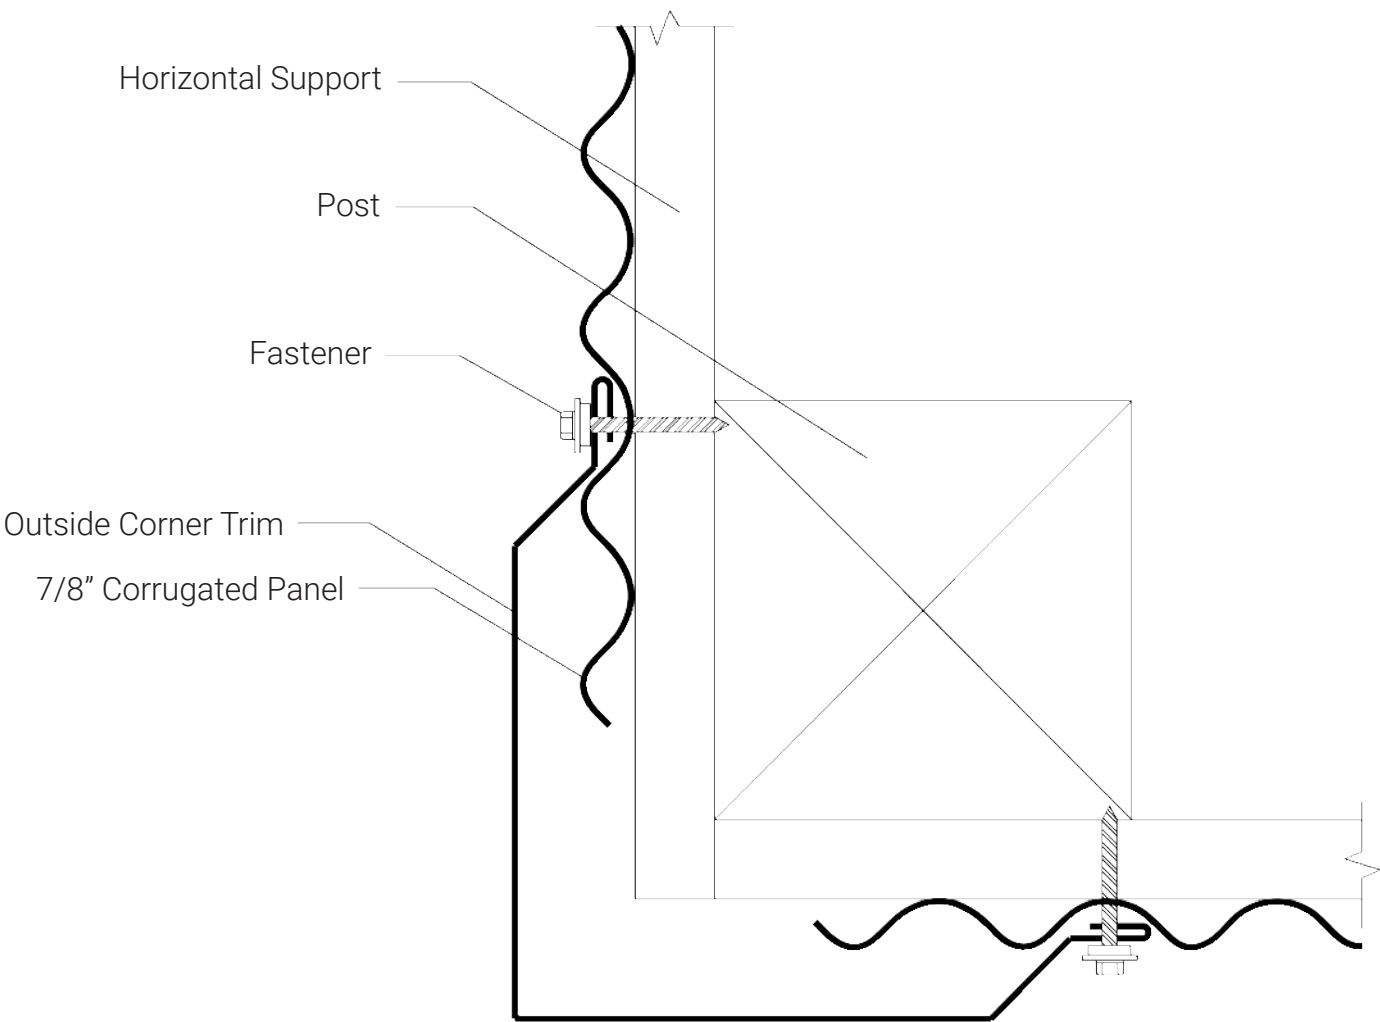

# Inside Corner Trim Detail

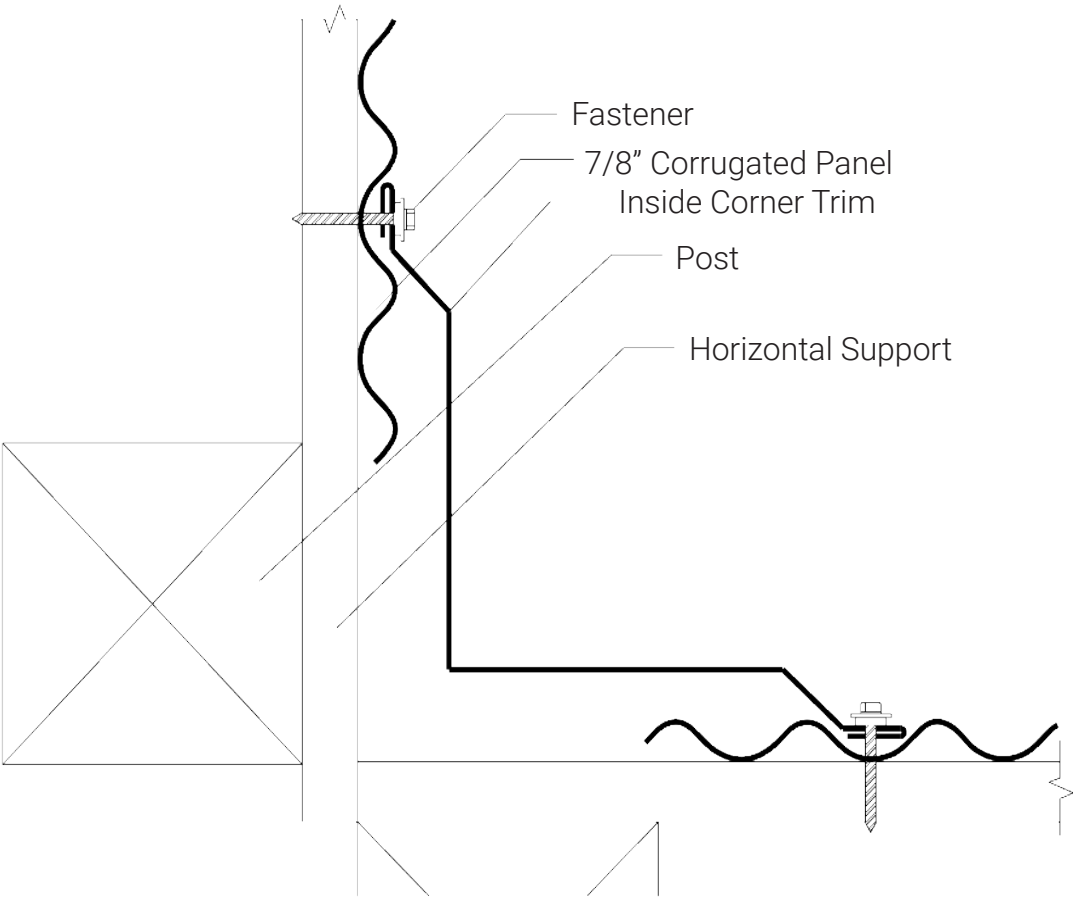






Let's  
**PARTNER TOGETHER**  
to build something beautiful!



Quality Without Compromise

 375 Shoop Dr, Penrose, CO 81240  
 [www.legacymetalcenter.com](http://www.legacymetalcenter.com)  
 (719) 784-1949